

User Manual

OPTI-Solar

**Solar Inverter for Water Pump
SP Revival Series**

Table Of Contents

| | |
|--|-----------|
| ABOUT THIS MANUAL | 1 |
| Purpose..... | 1 |
| Scope..... | 1 |
| SAFETY INSTRUCTIONS..... | 1 |
| Inspection..... | 1 |
| Installation..... | 1 |
| Operation | 2 |
| Maintenance | 2 |
| INTRODUCTION | 3 |
| Features..... | 3 |
| Basic System Architecture | 3 |
| Product Overview..... | 4 |
| INSTALLATION | 5 |
| Unpacking and Inspection..... | 5 |
| Preparation | 5 |
| Mounting the Unit..... | 5 |
| PV Connection | 6 |
| AC Output (Motor) Connection | 7 |
| Final Assembly..... | 8 |
| Control Signal Connection (Optional) | 9 |
| COMMISSIONING | 10 |
| OPERATION..... | 11 |
| Power ON/OFF | 11 |
| Operation and Display Panel..... | 11 |
| Parameter Setting..... | 12 |
| Fault and Warning Code | 17 |
| Fault Reference Code..... | 17 |
| Warning Reference Codes..... | 18 |
| SPECIFICATIONS..... | 19 |

ABOUT THIS MANUAL

Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

SAFETY INSTRUCTIONS



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

Inspection



If missing components or damaged inverter is found after receiving, please do NOT install or operate it. Otherwise, it may cause human injury or equipment damage.

Installation



1. Before installation, please make sure if the voltage range of PV panel meets the requirement.
2. Check if all wires are firmly connected without short circuit. Otherwise, it will cause equipment damage.
3. Do NOT install this inverter under direct sunlight because high temperature may cause equipment damage.
4. Please install the inverter away from inflammable and explosive objectives. Please ensure no liquid can enter the inverter.
5. Please install the inverter on metal non-combustible surface.



1. **CAUTION!!** Only qualified personnel can install and operate this inverter.
2. To reduce risk of electric shock, disconnect power source before making wire connection. Otherwise, it may cause electrical shock.
3. To reduce risk of electric shock, NEVER touch any terminals on electric circuits.
4. If connection cable between inverter and water pump is more than 50m, please be sure to install a three-phase AC reactor. Inductance value for each phase is about 1mH. Otherwise, water pump would be easily to be damaged.

Operation



1. Only after wire connection is complete and put cover back to the inverter, it's ok to do commissioning. Otherwise, it will cause electric shock
2. If sunlight is sufficient but little water is pumped, maybe the wires on motor connection are reversely connected. Please reverse any two wires of them.
3. When testing water pump, be sure to install water pump at appropriate water level. Never allow water pump in dry running. Otherwise, the inverter will activate protection.

Maintenance



1. Only qualified personnel can maintain, repair, inspect the inverter and replace any components.
2. It may still contain energy after disconnecting power source for 10 minutes. Only service the unit after the bus voltage is within safe range.

INTRODUCTION

Interest in renewable energy has increased over the past few years due to solar power becoming more cost effective and eco-friendly. This is a solar inverter which allows power to be switched from the DC power obtained from solar panels to the AC power needed to control the pump. With the renewable solar inverter, pumps can adapt to solar power sources rather than traditional electrical supplies or generators.

 
This solar inverter is built-in with MPPT solar charger to maximize solar power. Besides, it is easy to install with low maintenance cost. It becomes an eco-friendly solution for the rural areas where grid power is expensive and unreliable.

Features


- Built-in MPPT solar charger
- Supports three-phase asynchronous motor
- Built-in full protection and self-diagnosis
- Soft start function prevents water hammer effect and extends system lifecycle
- Comprehensive LCD and LEDs display real-time system status
- Remote monitoring through RS-485

Basic System Architecture

This solar inverter is specially designed to power water pump. The following illustration shows basic application for this inverter. It also includes PV modules and remote float switches to have a complete running system.



Product Overview

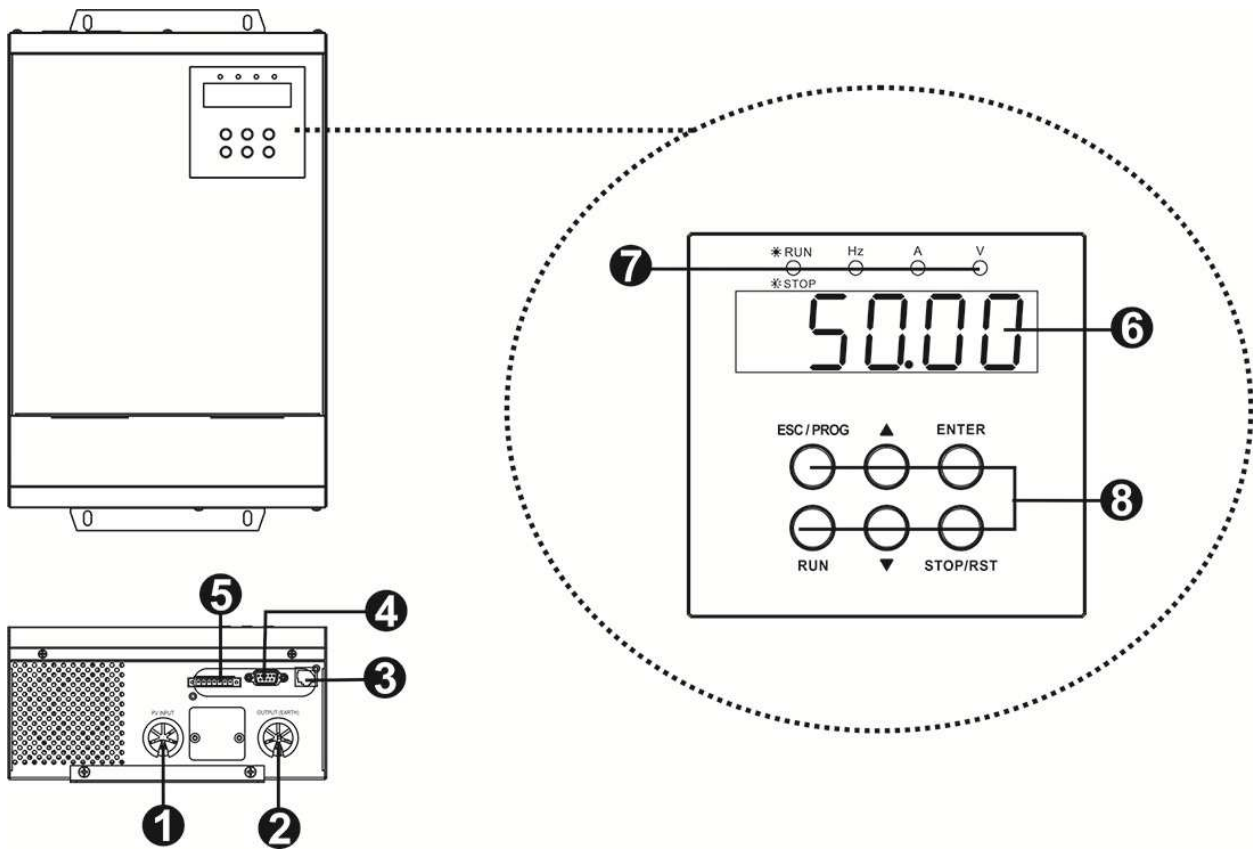

1. PV input
2. AC output
3. RS-485 communication port
4. RS-232 communication port
5. Signal control slot
6. Display screen (Refer to Operation and Display Panel for the details)
7. LED indicators (Refer to Operation and Display Panel for the details)
8. Operation buttons (Refer to Operation and Display Panel for the details)

INSTALLATION


Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- The unit x 1
- User manual x 1
- RJ45 cable x 1
- RS-232 cable x 1

Preparation


Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

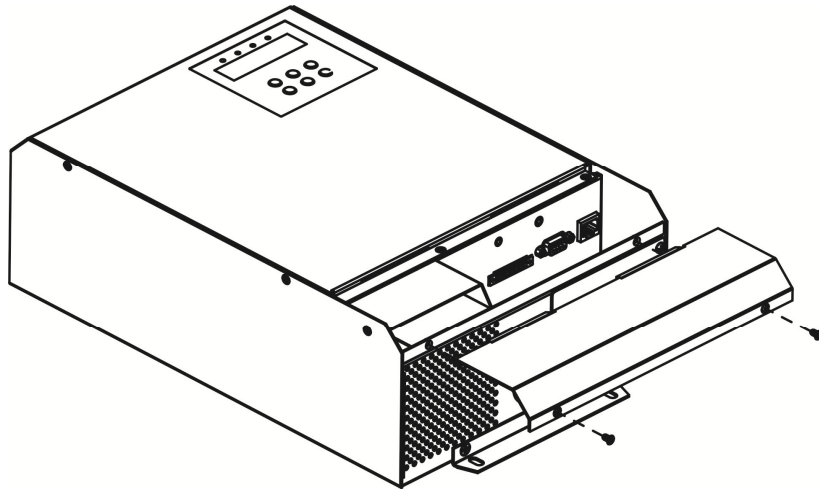

Mounting the Unit


Consider the following points before selecting where to install:

- Do not mount the inverter on flammable construction materials.
- Mount on a solid metal surface.
- Avoid direct sunlight. Be sure the environment is shady and cool.
- Be sure to install the inverter into a box with waterproof and dustproof.
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

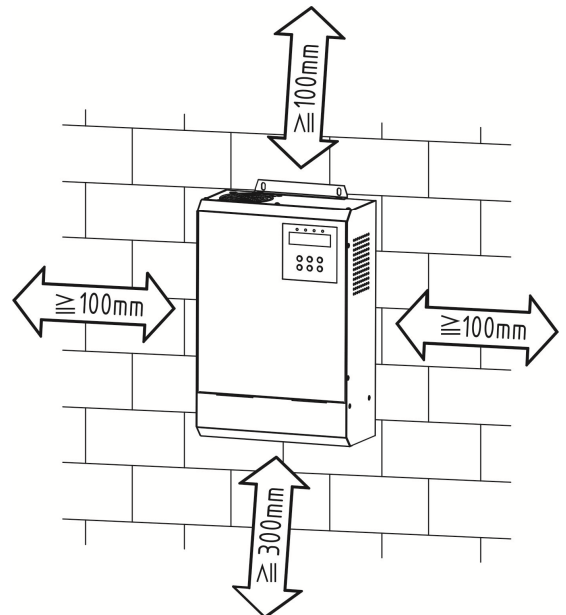


SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

1. Drill four holes in the marked locations with four screws.

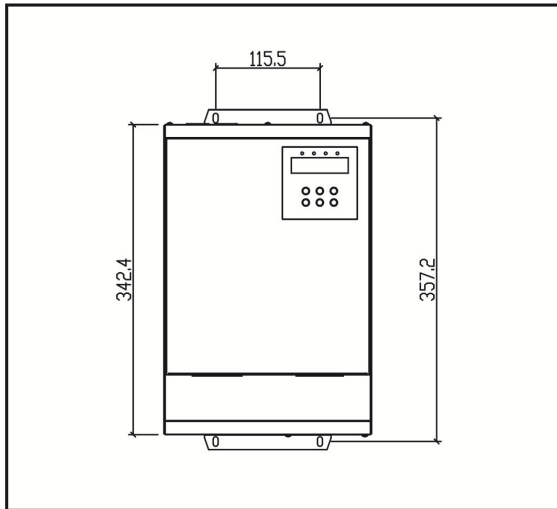

2. Install the unit by screwing four screws. It's recommended to use M5 screws.

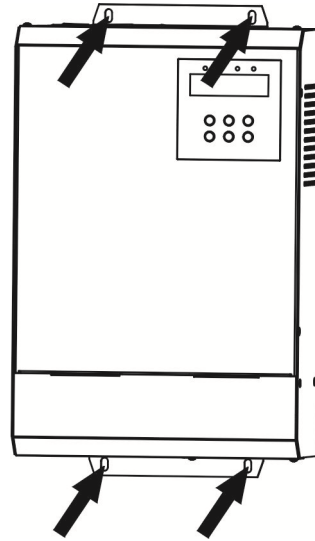

PV Connection

CAUTION: Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules. The recommended spec of DC breaker is C32A/2P/1000VDC/25KA for SP7000 Revival and C40A/2P/1000VDC/25KA for SP10000 Revival.

NOTE: It's required to install PV combiner box when using several PV modules in parallel and series.



CAUTION: Important

Before making PV connection, be sure to do the following actions to prevent human injury or machine damage.

1. It's required to turn off circuit breaker.
2. Make sure connect positive pole (+) of PV input connector in inverter to positive pole (+) of PV modules and negative pole (-) of PV input connector in inverter to negative pole (-) of PV modules.

PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. DC voltage (800VDC).
2. Accumulated voltage of connected PV panels should be close to 560V for inverter with 380V output voltage.

To calculate PV module numbers in series (N) and in parallel (M), please follow below formula:

- $Imp > Po / (Kvo \times 0.9 \times M)$
Po represents the rated output power.
Kvo is equal to 560V/585/606V/642V for 380V/400V/415V/440V output voltage respectively.
- Maximum PV module numbers in series (N) > 560 / Vmp

We strongly recommend the total PV Vmp is around 560Vdc to get the optimum MPPT output.

Below are popular solar panel specifications in the market:

- A. 140-A: 140W, Vmp=17.9V, Imp=7.82A, Voc=22.0V
- B. 250-A: 250W, Vmp=30.64, Imp=8.16A, Voc=37.38V
- C. 300-A: 300W, Vmp=31.72, Imp=9.46A, Voc=38.56V


| Inverter model | SP7000 Revival | SP10000 Revival |
|----------------|---|---|
| PV Panel 140-A | 32 pieces in Series x 2 Strings (8960W PV Panels) | 32 pieces in Series x 3 Strings (13440W PV Panels) |
| PV Panel 250-A | 19 pieces in Series x 2 Strings (9500W PV Panels) | 19 pieces in Series x 3 Strings (14250W PV Panels) |
| PV Panel 300-A | 17 pieces in Series x 2 Strings (10200W PV Panels) | 16 pieces in Series x 3 Strings (15300W PV Panels) |

AC Output (Motor) Connection

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC output connection. To reduce risk of injury, please use the proper recommended terminal and cable size as below.

Recommended terminal types:

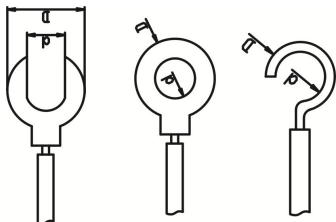

Suggested cable requirement:

| Model | Typical Amperage | Wire size | Terminal | | Torque Value |
|-----------------|------------------|-----------|------------|--------|--------------|
| | | | Dimensions | | |
| | | | d (mm) | D (mm) | |
| SP7000 Revival | 15A | 13 AWG | 4.5 | 9.5 | 1.3 ~ 1.4 Nm |
| SP10000 Revival | 22A | 11 AWG | 4.5 | 9.5 | 1.3 ~ 1.4 Nm |


Please follow below steps to implement motor connection:

1. Remove insulation sleeve 10mm for three conductors. And shorten three conductors 3 mm.
2. Insert wires according to polarities indicated on terminal block and tighten the terminal screws.

NOTE: To reverse the direction of motor rotation, reverse any two wires.

| | | | | |
|---------------|-------------|-------------|--------------|--------------|
| US | Black (BLK) | Red (RED) | Yellow (YEL) | Ground (GND) |
| International | Gray (GRY) | Black (BLK) | Brown (BRN) | Ground (GND) |


International standards for motor lead wire

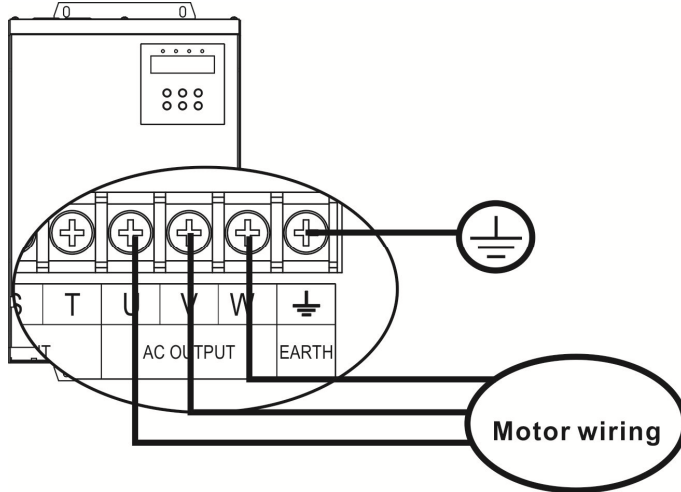

3. Make sure the wires are securely connected.

Final Assembly


After connecting all wirings, please put bottom cover back by screwing two screws as shown below.

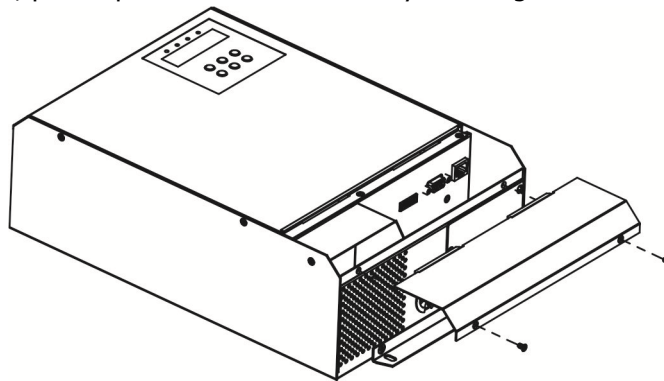

Remote Communication Connection


WARNING: Please do NOT mis-connect the wires between RJ45 and RS485/RS-232 converter.

First, please use one RS485 to RS 232 converter as media converter between inverter and computer. Please follow below chart for wiring connection between RS485 on the inverter and media converter. It's necessary to connect to the utility as power source for the media converter. Then, use supplied RS-232 cable to connect to converter and computer. After wiring is complete, the media converter will light on and any data transmission occurs, the indicators for RXD and TXD will flash.

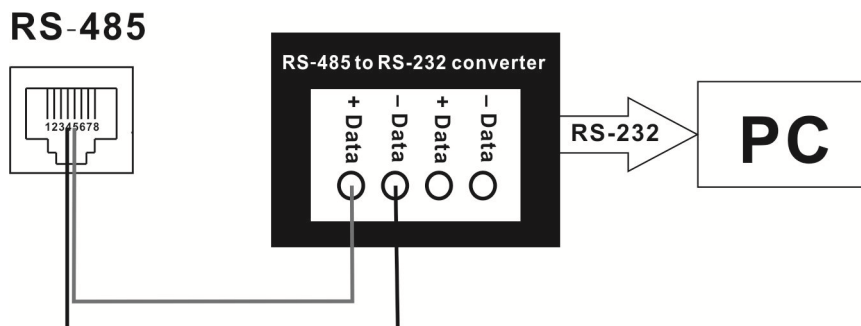

Control Signal Connection (Optional)

There are 7 ports in control signal connection. 2-port on the right side is to power supply for remote panel. 5-port on the left side is to detect water level to prevent water pump from dry running and water tank from overflow/underflow.

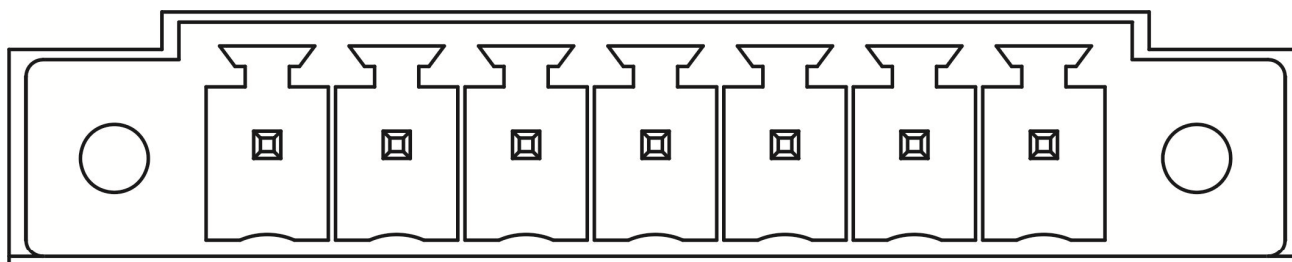


| | | | | | | |
|---------------------|-----|-----|-----|------|-------------------------------|------|
| COM2 | DI1 | DI2 | DI3 | COM1 | GND | +VCC |
| Remote float switch | | | | | Power supply for remote panel | |

Power Supply for Remote Panel

If using remote panel, please connect these two ports to supply power for remote panel. Please follow user manual of remote panel for the detailed wire connection.


Remote float switch Detection

Control Signal Port:

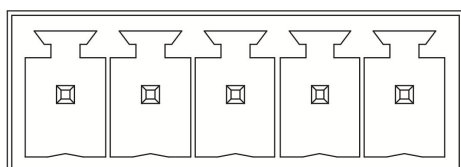

| | | | | |
|-------------------------|-----|-----|-------------------------|------|
| COM2 | DI1 | DI2 | DI3 | COM1 |
| Remote float switch (1) | | | Remote float switch (2) | |

Internal circuit:

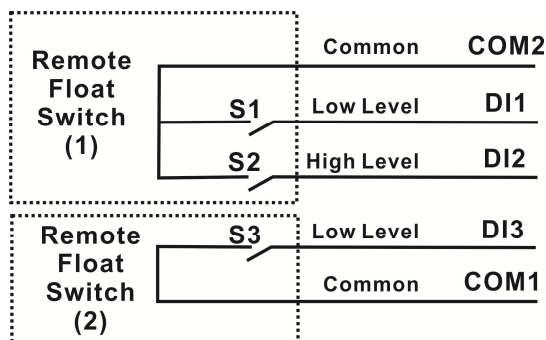

Signal Port Status

| Signal Water level status | Remote Float Switch (1) | | Remote Float Switch (2) |
|------------------------------|-------------------------|-------|-------------------------|
| | S1 | S2 | S3 |
| Normal Level | Open | Open | Close |
| Low Level | Close | Open | Open |
| High Level | Open | Close | n/a |

Remote float switch (1):

It's to prevent water tank overflow or underflow by sensing a remote float switch in water tank. When water level is normal, it will keep DI1 & COM2 and DI2 & COM2 in open status. When water level is high in water tank, it will receive high-level signal (open status on DI1 & COM2 and closed status on DI2 & COM2) from float switch and stop the inverter. When water tank is in low level, it will receive low-level signal (closed status on DI1 & COM2 and open status on DI2) from float switch and start up the inverter. This action is only available when the auto turn-on function is enabled. If the water level is normal, DI1 and COM2 are normally in open status.

Remote float switch (2):

It's to prevent the water pump dry running by connecting to remote float switch. The length of connecting wire should not longer than 50m. If the water level is normal in the well, COM1 and DI3 (S3) is kept in normal close status. If the water level is low in the well, COM1 and DI3 (S3) will be open status. If this port is not connected to water level probe, be sure to connect COM1 and DI3 together. It's default setting from factory.

COMMISSIONING

Step 1: Check the following requirements before commissioning:


- Ensure all wires are firmly and correctly connected
- Use a megger to check insulation of motor and wires
- Check if the open circuit DC voltage of PV module meets requirement

Step 2: Switch on DC breaker and provide power to the inverter. Then, LCD screen will show 0.00. Please set up the parameters of the inverter such as rated power, rated frequency, rated current and rated voltage. For the detailed setting, please check "Parameter setting" section in Operation chapter.

Step 3: Press "RUN" button to activate the inverter. If the output frequency or water yield is low, it may be wrong for output wire connection. Please exchange any two wires connected to the motor. Please be sure the output frequency and water yield are normal. It means the wire connection is correct and complete.

OPERATION


Power ON/OFF

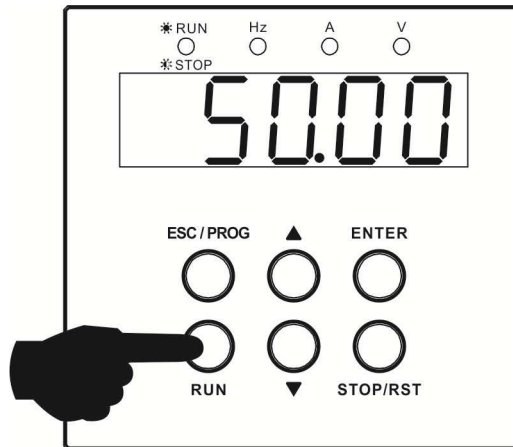

Once the unit has been properly installed, simply press "RUN" button (located on the button area) to turn on the unit.

Operation and Display Panel

The operation and display panel, shown in below chart, is on the top case of the inverter. It includes four indicators, six function buttons and a display screen, indicating the operating status and input/output power information.

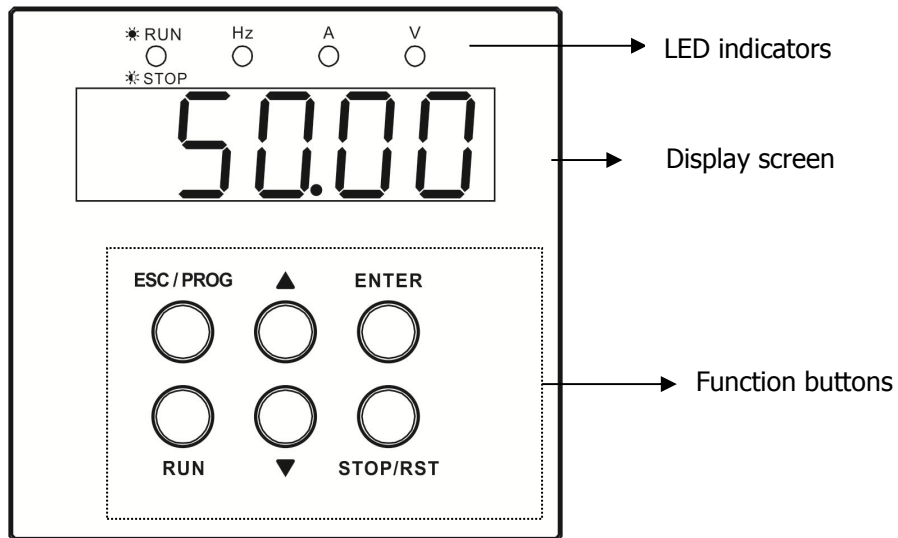

LED Indicator

| LED Indicator | | | Messages |
|---------------|-------|----------|--|
| Hz | Green | Solid On | Output frequency value is displayed on the LCD screen. |
| A | Green | Solid On | Output current value is displayed on the LCD screen. |
| V | Green | Solid On | Output voltage value is displayed on the LCD screen. |
| A and V | Green | Solid on | Output power value is displayed on the LCD screen. |
| STOP/RUN | Green | Solid on | The inverter is running. |
| | Green | OFF | The inverter stops. |


NOTE: After the inverter is turned on, LED display will show following information in turns: current output frequency, current output voltage, current output current, current PV voltage and current output power. After the inverter is turned off, LED display will still show output frequency until it's 0.

Function Buttons







| Function Button | Description |
|-----------------|--|
| ESC/PROG | To enter or exit setting mode. |
| ENTER | To confirm the selection/value in setting mode. |
| RUN | To turn on the unit, press this button for at least 1 second. |
| STOP/RST | <ul style="list-style-type: none"> To turn off the unit, press this button for at least 1 second. To reset fault message, press this button for at least 1 second. |
| ▲ | To increase the setting value. |
| ▼ | To decrease the setting value. |
| ▼ and ENTER | Press these two buttons at the same time to move cursor location. |






Parameter Setting

The entire display setting program structure is demonstrated as below chart.

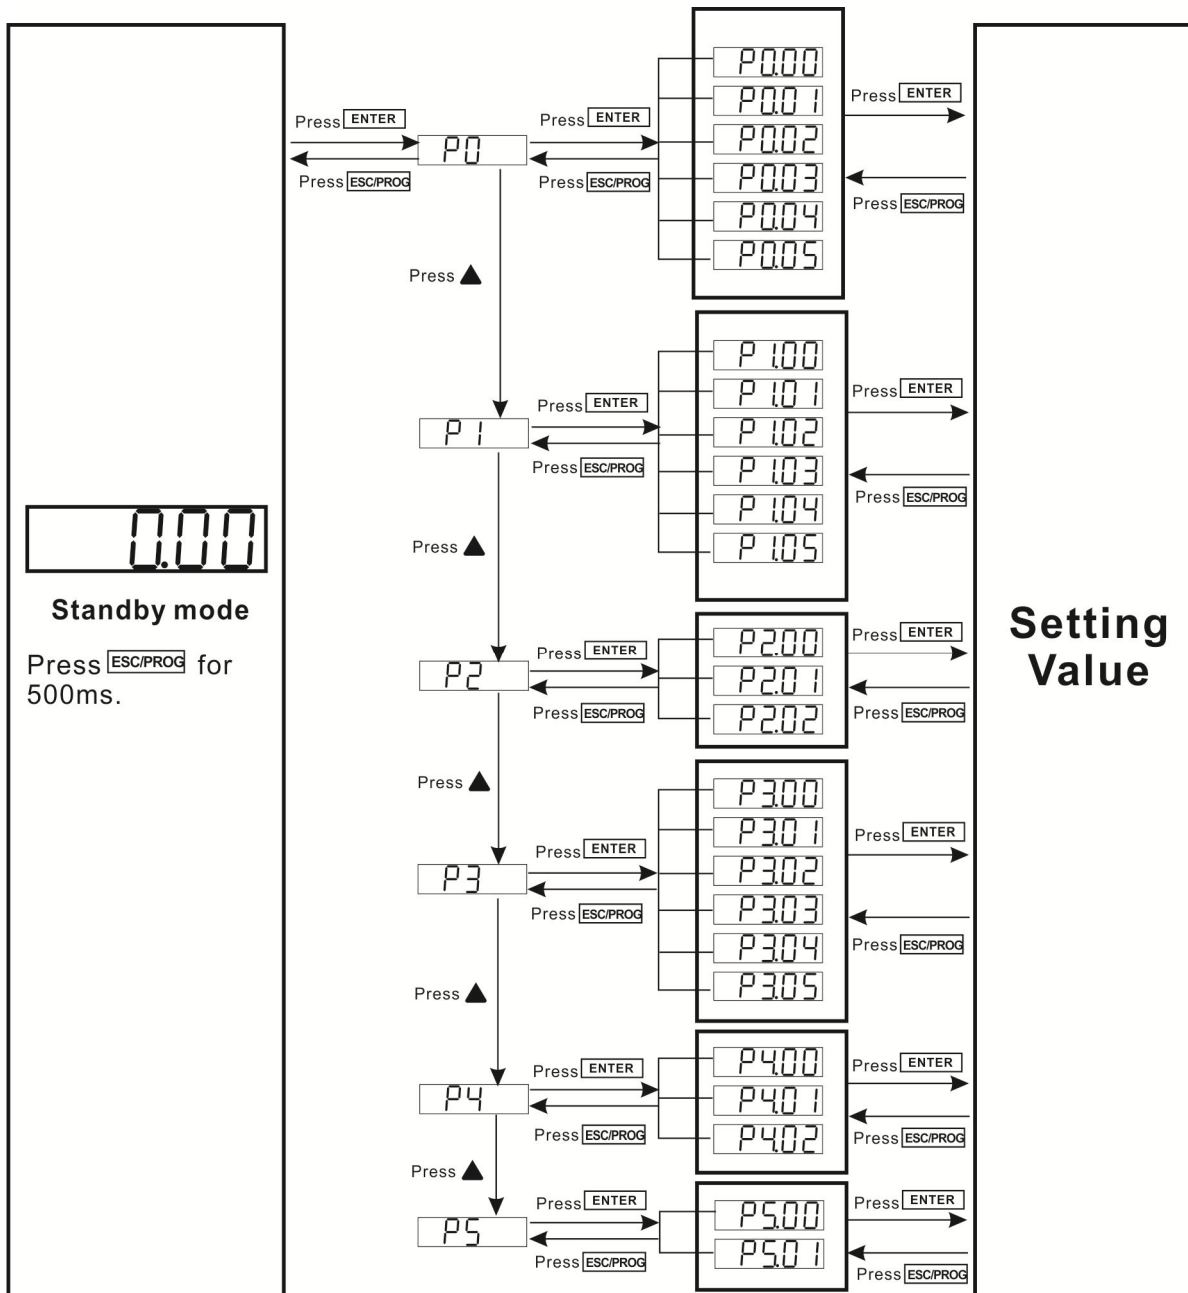

Parameter setting procedure for water pump
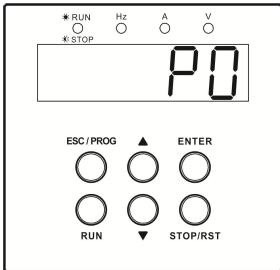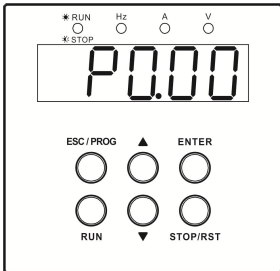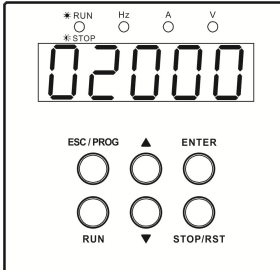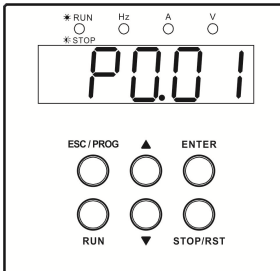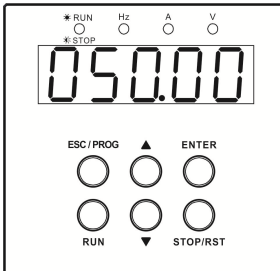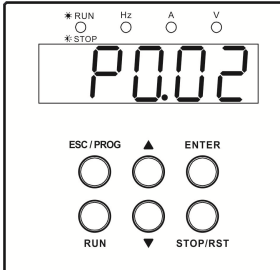
| Operation steps | Screen Display |
|---|---|
| <p>1. Press "ESC/PROG" button for 500ms. Then, it will display "P0" in display screen.</p> |  <p>The screen shows 'P0'. Above the screen are indicators for *RUN, Hz, A, V, and *STOP. Below the screen are six buttons: ESC/PROG (up arrow), ENTER (right arrow), RUN (down arrow), and STOP/RST (left arrow).</p> |
| <p>2. Press "ENTER" button for 500ms, display screen will show as in the right chart.</p> |  <p>The screen shows 'P0.00'. The layout of indicators and buttons is the same as in the previous step.</p> |
| <p>3. Press "ENTER" button again to start to set up rated power of the water pump. Press "ENTER" and "DOWN" buttons to switch cursor location. Press "UP" or "DOWN" button to change value for rated power. Until it shows correct rated power, please press "ENTER" button to confirm the setting.</p> |  <p>The screen shows '02000'. The layout of indicators and buttons is the same as in the previous steps.</p> |
| <p>4. Press "UP" button for 500ms to switch to P0.01 program.</p> |  <p>The screen shows 'P0.01'. The layout of indicators and buttons is the same as in the previous steps.</p> |
| <p>5. Press "ENTER" button to be able to set up rated frequency. Press "ENTER" and "DOWN" buttons to switch cursor location. Then, press "UP" or "DOWN" button to change value for nominal frequency. Until it shows correct nominal frequency, please press "ENTER" button to confirm the setting.</p> |  <p>The screen shows '050.00'. The layout of indicators and buttons is the same as in the previous steps.</p> |
| <p>6. Press "UP" button for 500ms to switch to P0.02 program.</p> |  <p>The screen shows 'P0.02'. The layout of indicators and buttons is the same as in the previous steps.</p> |
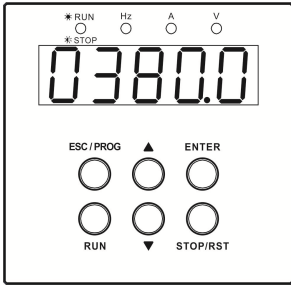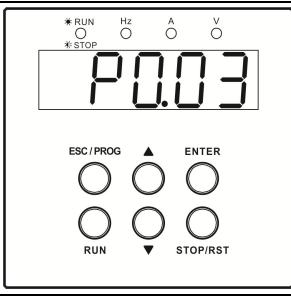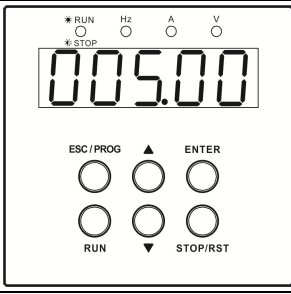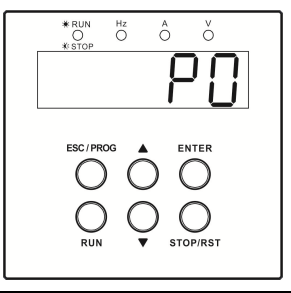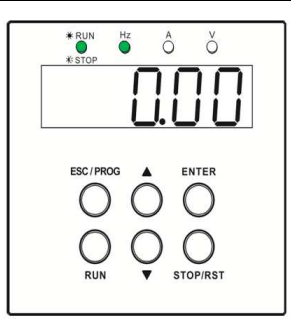
| | |
|---|---|
| <p>7. Press "ENTER" button to be able to set up nominal voltage of the water pump. Press "ENTER" and "DOWN" buttons at the same time to switch cursor. Then, press "UP" or "DOWN" button to change value for nominal voltage. Until it shows correct nominal voltage, please press "ENTER" button to confirm the setting.</p> |  <p>The control panel features a digital display showing '0380.0'. Above the display are four indicator lights labeled '* RUN', 'Hz', 'A', and 'V'. Below the display are six buttons: 'ESC/PROG' (left), 'ENTER' (right), 'RUN' (bottom left), and 'STOP/IRST' (bottom right), with up and down arrow buttons in the center.</p> |
| <p>8. Press "UP" button for 500ms to switch to P0.03 program.</p> |  <p>The control panel display shows 'P0.03'. The indicator lights and button layout are the same as in the previous step.</p> |
| <p>9. Press "ENTER" button to be able to set up nominal current of the water pump. Press "ENTER" and "DOWN" buttons to switch cursor location. Then, press "UP" or "DOWN" button to change value for nominal current. Until it shows correct nominal current, please press "ENTER" button to confirm the setting.</p> |  <p>The control panel display shows '005.00'. The indicator lights and button layout are the same as in the previous steps.</p> |
| <p>10. Then, all parameters of water pump are set up completely. Press "ESC/PROG" button to return to P0 level. Please press "ESC/PROG" button again for 1 second to return to main interface.</p> |  <p>The control panel display shows 'P0'. The indicator lights and button layout are the same as in the previous steps.</p> |
| <p>11. Turn on the inverter by pressing "RUN" button. Then, RUN/STOP LED will light up and display screen will show inverter information in turns.</p> |  <p>The control panel display shows '0.00'. The 'RUN' indicator light is illuminated. The button layout remains the same.</p> |

NOTE: If it's requested to have the inverter is automatically turned on every morning, please set up program P4.01 as "1" in standby mode.

Parameter Setting Table

○: This parameter can be modified no matter the inverter is in operation or off status.

⊙: This parameter can be modified only when inverter is turned off and it shows 0.00 Hz in display screen.

| Program # | Description | Setting Range | Unit | Default Value | Note |
|---|-------------------------------|---|------|---------------|------------------------------------|
| P0 Parameter settings for the motor | | | | | |
| P0.00 | Nominal power | 10-11000 | W | 7500 | ⊙ |
| P0.01 | Nominal frequency | 50/60 | Hz | 50 | ⊙ |
| P0.02 | Nominal voltage | 323-506 | V | 380 | ⊙ |
| P0.03 | Nominal current | 0.1-60 | A | 15 | ⊙ |
| P0.04 | Upper limit for frequency | Setting value in P0.05 – setting value in P0.01 | Hz | 50 | ⊙ |
| P0.05 | Low limit for frequency | 6 – setting value in P0.04 | Hz | 10 | ⊙ |
| P1 Over-current device on the motor and torque increasing | | | | | |
| P1.00 | Maximum current limit | 10-200 | % | 110 | A multiple of nominal current ○ |
| P1.01 | Kp for max. current control | 50-6000 | None | 1000 | ○ |
| P1.02 | Ki for max. current control | 5-1000 | None | 100 | ○ |
| P1.03 | 60S overload protection | 110-250 | % | 150 | ⊙ |
| P1.04 | Overload protection on motor | 110-250 | % | 200 | ⊙ |
| P1.05 | Voltage for torque increasing | 0-10 | % | 0 | Percentage of nominal voltage |
| P2 PV DC voltage setting | | | | | |
| P2.00 | Over DC voltage protection | Setting value in P2.01 - 800 | V | 800 | ⊙ |
| P2.01 | Under DC voltage protection | 220 – Setting value in P2.00 | V | 220 | ⊙ |
| P2.02 | PV reference voltage | Setting value in P2.01 – setting value in P2.00 | V | 530 | ○ |

| Program # | Description | Setting Range | Unit | Default Value | Note |
|--|--|--|------|---------------|------|
| P3 Protection setting for the inverter of the water pump | | | | | |
| P3.00 | Sleep mode while PV energy is weak | 10-3600 | S | 120 | ○ |
| P3.01 | Sleep mode for dry running | 10-7200 | S | 1200 | ○ |
| P3.02 | Allow dry pumping duration | 1-3600 | S | 5 | ○ |
| P3.03 | Over-temperature fault on inverter | 60-100 | °C | 85 | ⊙ |
| P3.04 | Over-temperature warning on inverter | 10 – setting value in P3.02 | °C | 75 | ○ |
| P3.05 | Acceleration time for motor | 1-3600 | S | 20 | ⊙ |
| P3.06 | Deceleration time for motor | 1-3600 | S | 20 | ⊙ |
| P3.07 | Over-temperature warning for environment | 10-60 | °C | 45 | ○ |
| P4 Inverter operation mode setting | | | | | |
| P4.00 | MPPT function enable/disable | 0 : Disable. Control PV voltage in setting value of P2.02 1 : Enable | None | 1 | ⊙ |
| P4.01 | Auto turn-on | 0 : Disable 1 : Enable | None | 0 | ⊙ |
| P4.02 | Dry-pumping protection enable/disable | 0 : Disable 1 : Enable | None | 1 | ○ |
| P5 User password setting and restore to default setting | | | | | |
| P5.00 | User password setting | 0-9999 | None | 0 | ○ |
| P5.01 | Remote monitored device ID setting | 1-247 | None | 1 | ○ |
| P5.02 | Restore to default setting | 0 : No 1 : Yes | None | 0 | ⊙ |

Fault and Warning Code

All fault and warning codes can be reset by pressing "RST" button except for A07 and A11. When faults or warning occur, press "RST" button and the inverter will enter standby mode. Please press "RUN" button to turn on the inverter for operation again.

After A02 or A03 warning occurs, the inverter will auto restart operation after a period of sleep mode. If pressing "RST" button during sleep mode, please be sure to press "RUN" button again for operation.

Fault Reference Code

| Fault code | Fault type | Possible Cause |
|-------------------|-----------------------------|---|
| E01 | Time out for BUS soft start | The resistor of soft start is broken. |
| E02 | Relay fault | The Relay is broken. |
| E03 | Over voltage in output | 1. Inverter control is abnormal. 2. Detection is interfered. |
| E04 | Over current in output | 1. Output short circuited. 2. The motor is suddenly locked. 3. The motor is abnormal. |
| E05 | Output voltage RMS High | Inverter control is abnormal. |
| E06 | High PV voltage | 1. PV input voltage is too high. 2. There is something wrong with voltage detection circuit. |
| E07 | Current unbalance | 1. Output phase loss 2. Output wire is short to the earth. 3. The motor is abnormal. |
| E08 | Fan Locked | The fan is locked. |
| E09 | Over Temperature | 1. IGBT temperature is too high 2. The wire of IGBT temperature detection is not connected. |
| E10 | Over current. | 1. Output short circuited. 2. The motor is suddenly locked. 3. The motor is abnormal. |
| E11 | Bus voltage over | 1. Pump intrusion. 2. PV voltage is too high. |
| E12 | Current detect fault | Current detection circuit is abnormal. |
| E13 | Output voltage detect fault | Voltage detection circuit is abnormal. |
| E14 | NTC0 no connect | Heatsink detected wire is not connected. |
| E15 | NTC1 no connect | Environment temperature detected wire is not connected. |

Warning Reference Codes

| Warning code | Warning type | Possible Cause |
|--------------|--|--|
| A01 | PV input voltage is too low. | 1. PV input voltage is too low. 2. Sunlight is too weak. |
| A02 | Weak sunlight | Sunlight is too weak |
| A03 | Dry running | 1. Water level in the well is low. 2. Nominal power of motor is not setting. |
| A04 | Overload | 1. The motor is suddenly locked. 2. The pump head is too high. 3. Wrong current setting on the motor. |
| A05 | Over current | 1. The motor is suddenly locked. 2. Wrong current setting on the motor. |
| A06 | EEPROM error | There is something wrong with EEPROM circuit. |
| A07 | IGBT over temperature warning | Over temperature on IGBT. |
| A08 | Over-temperature warning for environment | Over temperature warning. The default warning point is 45°C. |
| A09 | Over-temperature fault for environment | 1. Environment temperature is beyond the upper limit (60°C). 2. The wire of environment temperature detection is not connected. |
| A10 | Wrong parameter setting in the motor. | Wrong parameter setting in the motor. |
| A11 | Water tank is full. | Water tank is full. |
| A12 | Water tank is dry. | No water or water in low level in the water tower. |
| A13 | Well is dry. | No water or water in low level in the well. |
| A14 | Password verification is not complete. | No password is set up. |

SPECIFICATIONS

| MODEL | SP7000 Revival | SP10000 Revival |
|---|---|-----------------|
| Maximum PV Array Power | 12000 W | 17600 W |
| Rated Output Power | 7500 W | 11000 W |
| PV INPUT (DC) | | |
| Nominal DC Voltage / Maximum DC Voltage | 540 VDC / 800 VDC | |
| Start-up Voltage | 250 VDC | |
| MPPT Voltage Range | 250 VDC ~ 780VDC | |
| Number of MPP Trackers | 1 | |
| OUTPUT | | |
| Nominal Voltage | 3 x 380/400/415/440 VAC | |
| Efficiency | > 97% | |
| Nominal Output Current | 15 A | 22 A |
| Motor Type | Three-phase asynchronous motor | |
| Frequency Precision | ±0.2% | |
| PROTECTION | | |
| Full Protection | Phase lost, dry pumping, motor locked, weak sunlight, over-voltage, under-voltage, over-current, surge, over-temperature and short circuit protection | |
| PHYSICAL | | |
| Dimension, D X W X H (mm) | 110 x 230 x 342 | |
| Net Weight (kgs) | 6 | 6.5 |
| Type of Mechanical Protection | IP20 | |
| INTERACE | | |
| Communication Port | RS-232/RS-485 | |
| ENVIRONMENT | | |
| Humidity | < 95% RH (No condensing) | |
| Operating Temperature | -20°C~45°C at 100% full load, 46°C~60°C power derating | |